



SOMETHING TO FLIP OVER.

MOTOROLA FLIPOUT™ with MOTOBLUR™

Welcome

Introducing the MOTOROLA FLIPOUT™ with MOTOBLUR™ - an innovative phone that's as unique as you are. Most intriguing is how its touch screen rotates on a hinge to expose a QWERTY keypad with a separate number row for easy.

 
MOTOBLUR is the only service that can sync all your friends, emails, messages, Facebook™, MySpace, Twitter and happenings with continuous updates and back-ups.




Your phone

Most of what you need is in the touchscreen and three simple keys on the front:

- **Menu:** Open menu options.
- **Home:** Go to the home screen and apps menu.
- **Back:** Go back one screen.

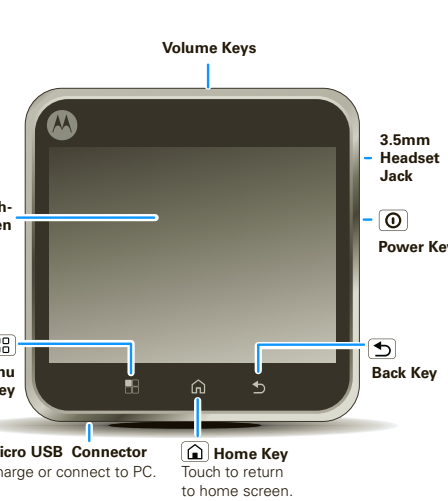

 If you want a full keyboard (good for texting, or searching in your **Contacts** list), just open the phone.

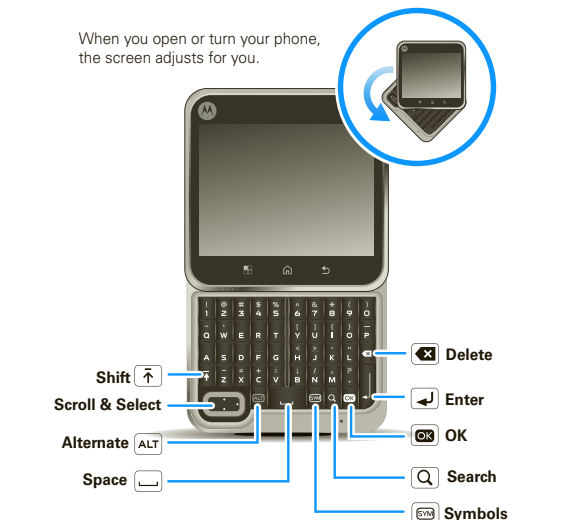

Let's go

Let's get you up and running.

Tip: Your phone comes with a microSD memory card already installed. Make sure it's inserted. Some apps, like camera and camcorder, need the memory card to work.

Caution: Before assembling, charging or using your phone for the first time, please read the important **Safety, Regulatory & Legal** information provided with your phone.



Touch

It's all in the touch:

 
- **Touch:** Choose an icon or option.
- **Touch & Hold:** Open options.
- **Drag:** Scroll or move slowly.
- **Flick:** Scroll or move quickly.
- **Pinch-to-zoom:** Get a closer look at maps, web pages, or photos.



Home

The *home screen* gives you all your latest information in one place. It's what you see when you turn on the phone or touch Home (house icon) from a menu.


Use the widgets, shortcuts and panels to see what's important to you—whether it's home, work or play. To make the home screen yours, see "Personalize"

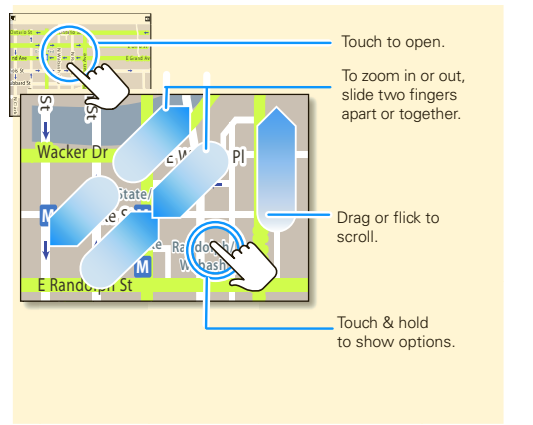

Personalize

Go ahead, add your personal touch. Change your widgets, wallpaper, ringtone, and more—make it yours.

 - **Home screen:** Touch and hold an empty spot until you see the **Add to Home screen** menu.
- **Tip:** To move or delete something, touch and hold it, then drag it to another spot or the trash can.
- **Ringtones & sounds:** Touch Menu (gear icon) > **Settings** > **Sound & display**.

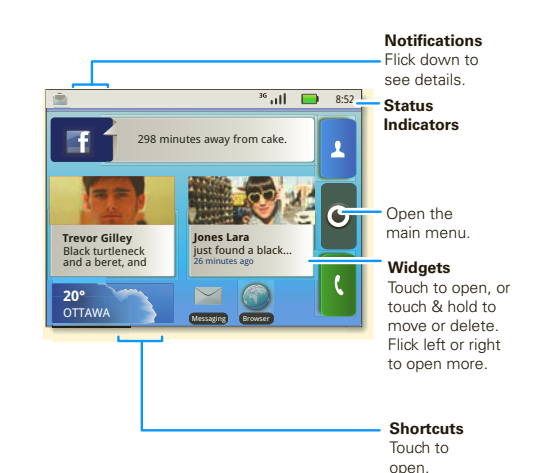

Let's go

Let's get you up and running.

Tip: Your phone comes with a microSD memory card already installed. Make sure it's inserted. Some apps, like camera and camcorder, need the memory card to work.

Caution: Before assembling, charging or using your phone for the first time, please read the important **Safety, Regulatory & Legal** information provided with your phone.



Certain features, services and applications are network dependent and may not be available in all areas; additional terms, conditions and/or charges may apply. Contact your service provider for details.

All features, functionality, and other product specifications, as well as the information contained in this guide, are based upon the latest available information and believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The MOTOBLUR Logo is a trademark of Motorola. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Facebook is a trademark of Facebook, Inc. Google, YouTube, Picasa, Gmail, and the Google logo are trademarks of Google, Inc. **WiFi** is a Certification Mark of the Wireless Fidelity Alliance, Inc. All other product or service names are the property of their respective owners.

© 2010 Motorola, Inc. All rights reserved.

Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Note: The images in this guide are examples only.

Motorola FLIPOUT with MOTOBLUR (MB511)
Manual Number: 68000202949-A



